

## Changing cartridge in 2004-b Mixer

Turn water of at isolator

1 remove indicator



2 undo screw inside indicator hole (flat blade, small)



3 Remove plastic chrome dome cover (do not use tool, fingers only required)



4 if water was leaking around the brass nut then try tightening up before changing as the nut may be loose. If water was coming around the square shaft then remove nut and change cartridge. Do not over tighten. Once nut is reinstalled turn water back on and check for leaks incase the nut needs further tightning.

5 Reverse all other processes.