




Notes:

- 1 a) ALL SINGLE LEAVES REQUIRE CENTER HOLE
- b) ALL LEAVES OVER 1300mm WIDE REQUIRE CENTRE HOLE
- c) ALL LEAVES OVER 2800mm TALL REQUIRE CENTRE HOLE

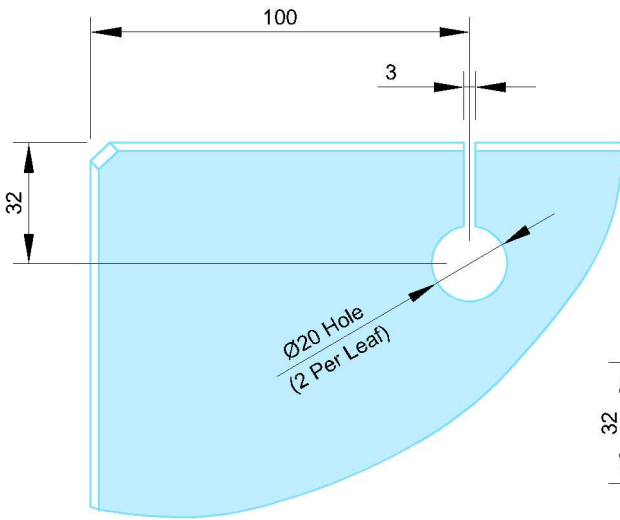

Glass Drilling Detail

Measure from the floor/FFL to the bottom of the base track/cowl. Add 30mm/-10mm for the clearance (ensure FFL is correct).

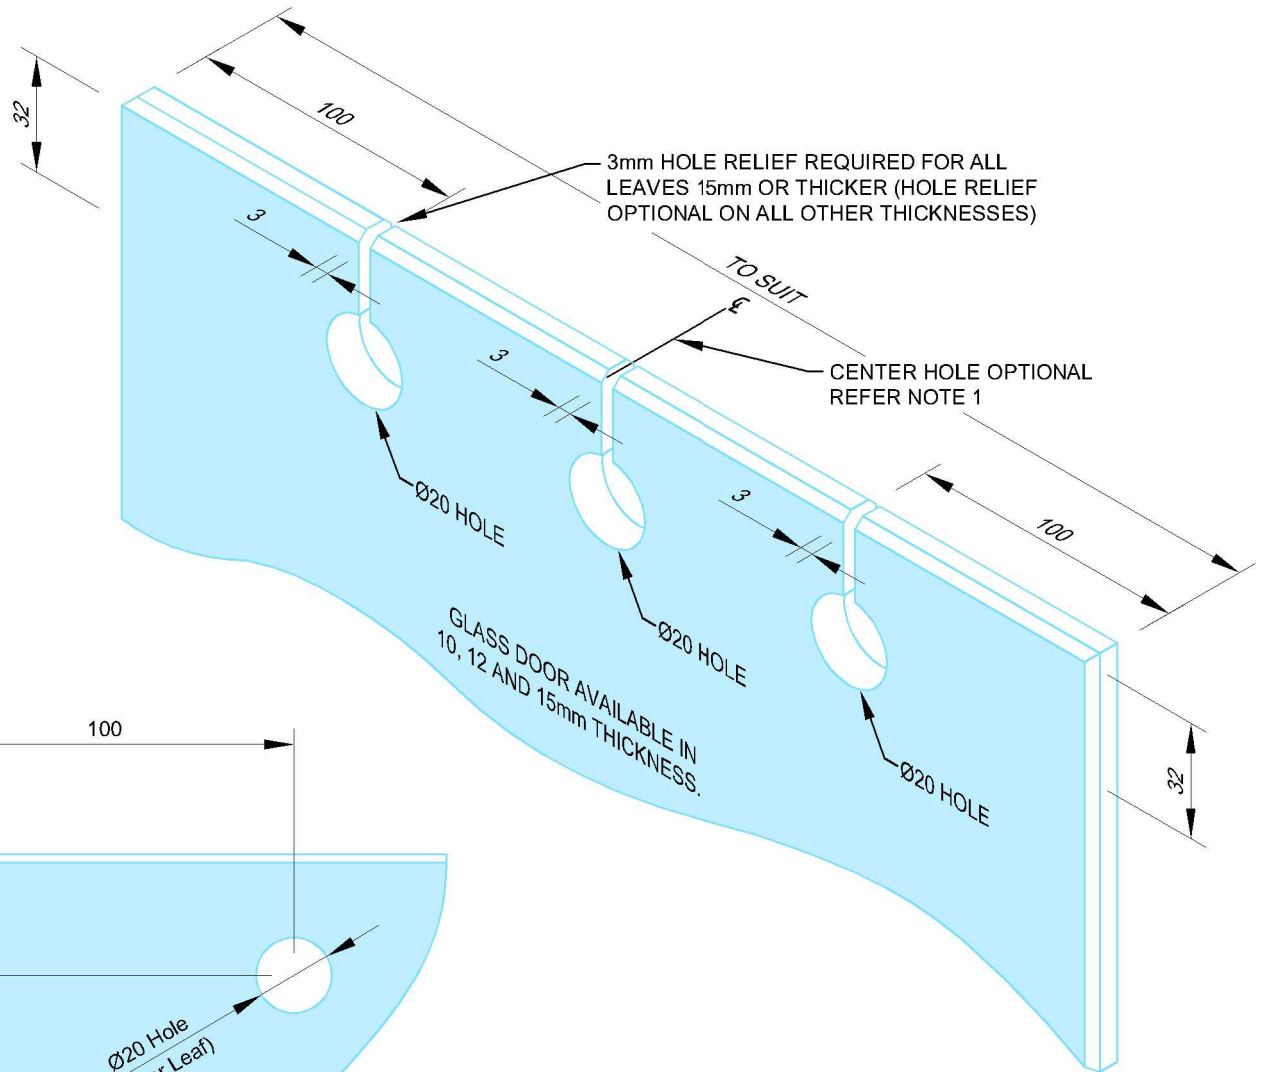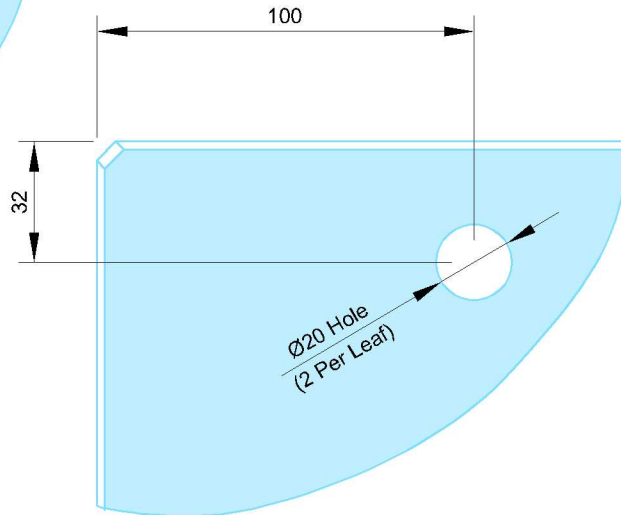

NOTES:

- * Do not scale
- * Unless otherwise stated all dimensions are in millimeters
- * FFL - Finished Floor Level (including carpets etc.)



SCALE
A4 NTS

TITLE
TF340
GLASS DOOR PREPARATION
FRAMELESS GLASS

DRG. NO.
CDS-TF340 Glass Door Prep